

Union Special®

INDUSTRIAL SEWING EQUIPMENT

ILLUSTRATED PARTS LIST

Mark IV, high speed, two needle machines with differential feed, for
toe closing or crotch seaming applications



MANUAL NO. PT9604-GR

STYLES

39500RBA
39500RBAC
39500UG
39500HUGC

09/24/14



Manual No. PT9604 Illustrated Parts List for 39500 Series Machines

Third Edition Copyright 2010

By

Union Special LLC Rights Reserved In All Countries

Printed in U.S.A. June 2010

PREFACE

This parts manual has been prepared to assist you in locating individual parts or assemblies on 39500 Series machines.

It is the desire of Union Special that each machine run at its optimum performance. Parts listed in this manual are designed specifically for your machine and are manufactured with utmost precision to assure long lasting service.

This manual has been comprised on the basis of available information. Changes in design and/or improvements may incorporate a slight modification of configuration in illustrations or part numbers.

On the following pages are illustrations and terminology used in describing the parts used on 39500 Series machines.



CONTENTS

PREFACE	2
SAFETY RULES	4
IDENTIFICATION OF MACHINES	5
CLASS DESCRIPTION	5
STYLE OF MACHINES	5
ILLUSTRATIONS	5
IDENTIFYING PARTS	6
NEEDLES	6
39500UG & HUGC THREADING DIAGRAM	7
39500RBA & RBAC THREADING DIAGRAM	8
MAIN FRAME, PRESSER FOOT RELEASE PARTS,	11
MISCELLANEOUS COVERS PLATES	11
MAIN FRAME, PRESSER FOOT RELEASE PARTS,	13
MISCELLANEOUS COVERS AND PLATES (CONT.)	13
CRANKSHAFT MECHANISM AND BUSHINGS	15
UPPER AND LOWER LOOPER DRIVING PARTS	17
UPPER AND LOWER KNIFE	19
FOOT LIFTER, THREAD TENSION PARTS AND MISCELLANEOUS EYELETS	21
FOOT LIFTER, THREAD TENSION PARTS AND MISCELLANEOUS EYELETS (CONT.)	23
NEEDLE DRIVE AND FEED MECHANISM	25
NEEDLE DRIVE AND FEED MECHANISM (CONT.)	27
CHAIN CUTTER SPARE PARTS LIST, FOR STYLES : 39500HUGC,RBAC	
29480JAT1 CHAIN CUTTER ASSEMBLY, FOR STYLE 39500HUGC	29
29480JAT2 CHAIN CUTTER ASSEMBLY, FOR STYLE 39500RBAC	29
ACCESSORIES	31
OIL METERING PIN	32
NOTES	33
NUMERICAL INDEX OF PARTS	34
NUMERICAL INDEX OF PARTS	35
NOTES	37
NOTES	38
NOTES	39



SAFETY RULES


1. Before putting the machines described in this manual into service, carefully read the instructions. The starting of each machine is only permitted after taking notice of the instructions and by qualified operators.

IMPORTANT! Before putting the machine into service, also read the safety rules and instructions from the motor supplier.

2. Observe the national safety rules valid for your country.
3. The sewing machines described in this instruction manual are prohibited from being put into service until it has been ascertained that the sewing units which these sewing machines will be built into, have conformed with the EC Council Directives (89/392/EEC, Annex II B).

Each machine is only allowed to be used as foreseen. The foreseen use of the particular machine is described in paragraph "STYLES OF MACHINES" of this instruction manual. Another use, going beyond the description, is not as foreseen.

4. All safety devices must be in position when the machine is ready for work or in operation. Operation of the machine without the appertaining safety devices is prohibited.
5. Wear safety glasses.
6. In case of machine conversions and changes all valid safety rules must be considered. Conversions and changes are made at your own risk.
7. The warning hints in the instructions are marked with one of these two symbols:

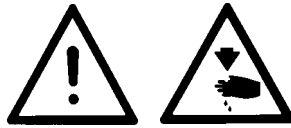

8. When doing the following the machine has to be disconnected from the power supply by turning off the main switch or by pulling out the main plug:
 - 8.1 When threading needle(s), looper, spreader etc.
 - 8.2 When replacing any parts such as needle(s), presser foot, throat plate, looper, spreader, feed dog, needle guard, folder, fabric guide etc.
 - 8.3 When leaving the workplace and when the workplace is unattended.
 - 8.4 When doing maintenance work.
 - 8.5 When using clutch motors without actuation lock, wait until the motor is stopped totally.
9. Maintenance, repair and conversion work (see item 8) must be done only by trained technicians or special skilled personnel under consideration of the instructions.
10. Any work on the electrical equipment must be done by an electrician or under direction and supervision of special skilled personnel.
11. Work on parts and equipment under electrical power is not permitted. Permissible exceptions are described in the applicable sections of standard sheet DIN VDE 0105.
12. Before doing maintenance and repair work on the pneumatic equipment, the machine has to be disconnected from the compressed air supply. In case of existing residual air pressure, after disconnecting from compressed air supply (i.e. pneumatic equipment with air tank), the pressure has to be removed by bleeding.

IDENTIFICATION OF MACHINES

Each UNION SPECIAL machine is identified by a style number, which is stamped into the style plate affixed to the middle of the machine under the tension assembly. The serial number is stamped into the serial number plate affixed to the right rear base of the machine.

CLASS DESCRIPTION

Mark IV Hi-Styled high speed, light to medium duty machine. One or two needles, three and four thread overseaming machines, differential feed, trimming mechanism with spring pressed lower knife, automatic lubricating system. Improved air cooling system.

For use with TAKATORI equipment

STYLE OF MACHINES

39500UG	Two needle, two loopers, four thread machine. - Typical Application - for line closing or crotch seaming women's stockings, & pantyhose. Seam Specification 514-SSa-1 (Mod.). Standard gauge 1/8 (1/8", 3.2mm). Stitch Range, 14-70 SPI; cam adjusted main and differential feeds. Maximum recommended speed 8000R.P.M.. Recommended needle 154GFS, size 075/029.
39500HUGC	Same as UG except with mechanically operated side action chain cutter 29480JAT1.
39500RBA	Two needle, one looper, one spreader three thread machine. Typical Application - for closing the toes on women's stockings, & pantyhose. Seam Specification 521-SSa-1 (Mod.). Seam width 1/8" (3.2mm). Stitch Range, 12-70SPI; cam adjusted main and differential feeds. Maximum recommended speed 8000R.P.M.. Recommended needle 154GFS, size 065/025.
39500RBAC	Same as RBA except with mechanically operated side action chain cutter 29480JAT2.

ILLUSTRATIONS

This manual has been arranged to simplify ordering repair parts. Exploded views of various sections of the mechanism are shown so that the parts may be seen in their actual position in the machine. On the page opposite the illustration will be found a listing of the parts with their part numbers, description and the number of pieces required in the particular view being shown.

Numbers in the first column are reference numbers only, and merely indicate the position of the part in the illustration. The reference number should never be used in ordering parts. Always use the part number listed in the second column.

Component parts of sub-assemblies which can be furnished for repairs are indicated by indenting their descriptions under the description of the main sub-assembly. As an example refer to the following text.

5.	29477MX	Upper Looper Thread Tube Assembly	1
6.	39568AN	Thread Tube	1
7.	39568J	Thread Tube Tension Spring	1
8.	22743	Set Screw, for thread tube tension spring	1

When a part is common to all machines covered in this manual, no specific usage will be mentioned in the description. However, when the parts for the various machines are not the same, the specific usage will be mentioned in the description and, if necessary, the difference will be shown in the illustration.

*NOTE: Ref. No. showing no Part No. is for location only. Part is not for sale separately.

A numerical index of all the parts shown in this manual is located at the back. This will facilitate locating the illustration and description when only a part number is known.

IDENTIFYING PARTS

Where the construction permits, each part is stamped with its part number. On some of the smaller parts and on those where construction does not permit, an identification letter is stamped in, to distinguish the part from similar ones.

PLEASE NOTE: Part numbers represent the same part, regardless of which manual they appear. On all orders please include part number, name and style of machine for which the part was ordered.

For optimum performance use only genuine Union Special replacement parts.

NEEDLES

Each needle has both a type and size number. The type number denotes the kind of shank, point, length, groove, finish and other details. The size number, stamped on the needle shank, denotes the largest diameter of the blade measured between the shank and the eye. Collectively, the type number and size number represent the complete symbol which is given on the label of all needles packed and sold by Union Special.

TYPE

DESCRIPTION


154 GFS	Slabbed shank, round point, .046 inch double slab, standard length, curved blade, single groove, ball point, spotted, chromium plated - sizes 065/025, 070/027, 075/029, 080/032. For styles 39500UG, HUGC, RBA & RBAC.
---------	---

When changing the needle, make sure it is fully inserted in the holder before the screw is tightened.

When ordering needles, please use the complete type and size numbers as printed on the package to ensure prompt and accurate processing of your order. A complete order should read as follows: "100 needles, type 154 GFS, size 075/029".




39500UG & HUGC THREADING DIAGRAM

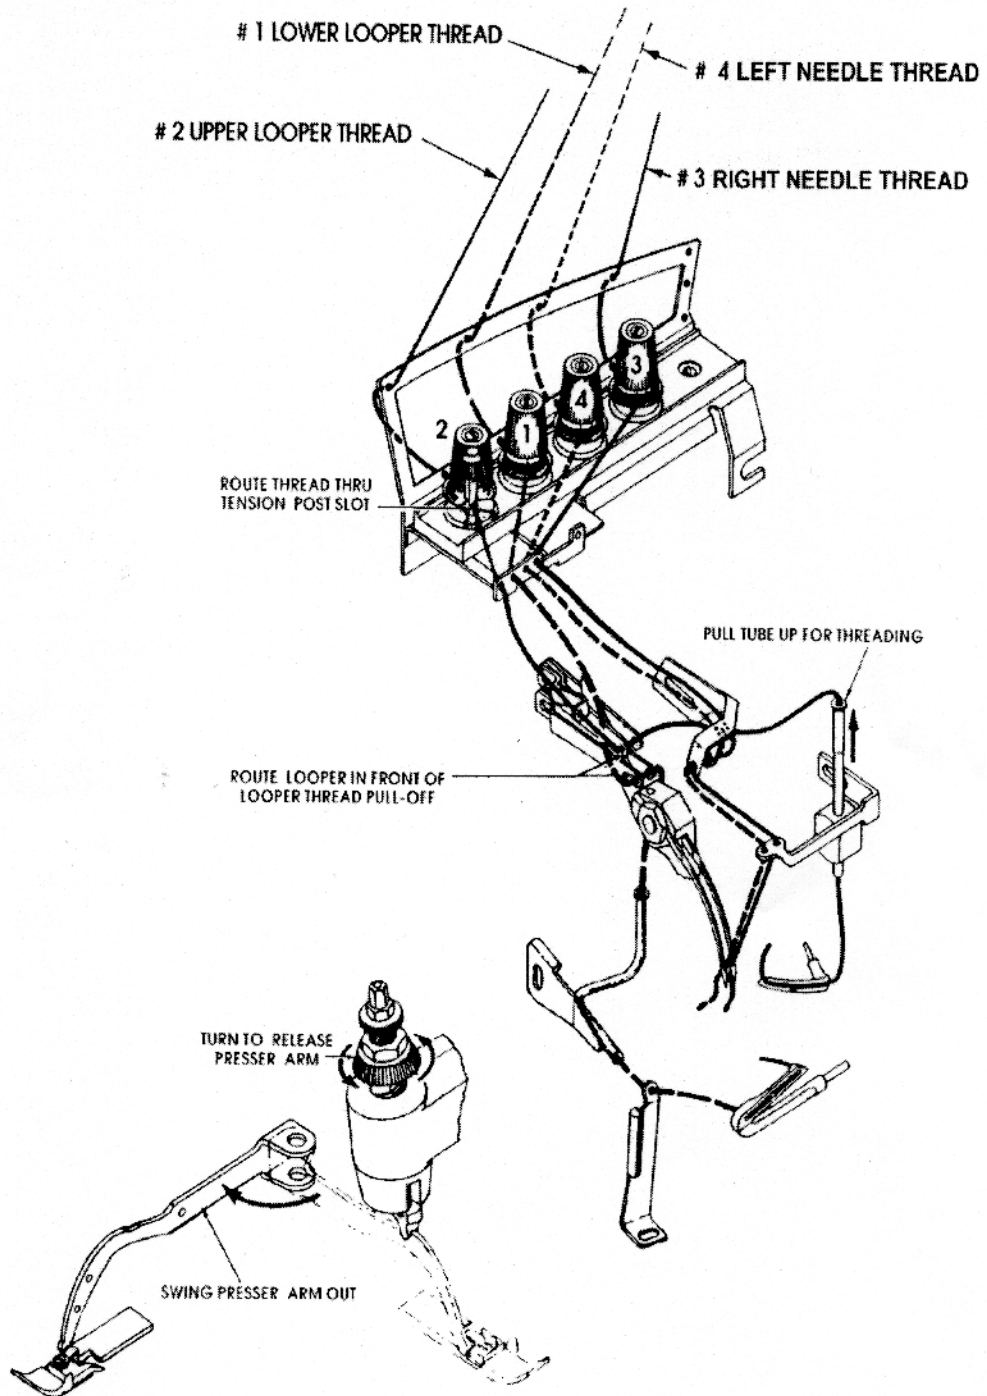

HUGC 1P

Thread machine in sequence as shown: (1) lower looper thread, (2) upper looper thread, (3) right needle thread and (4) left needle thread.

39500RBA & RBAC THREADING DIAGRAM

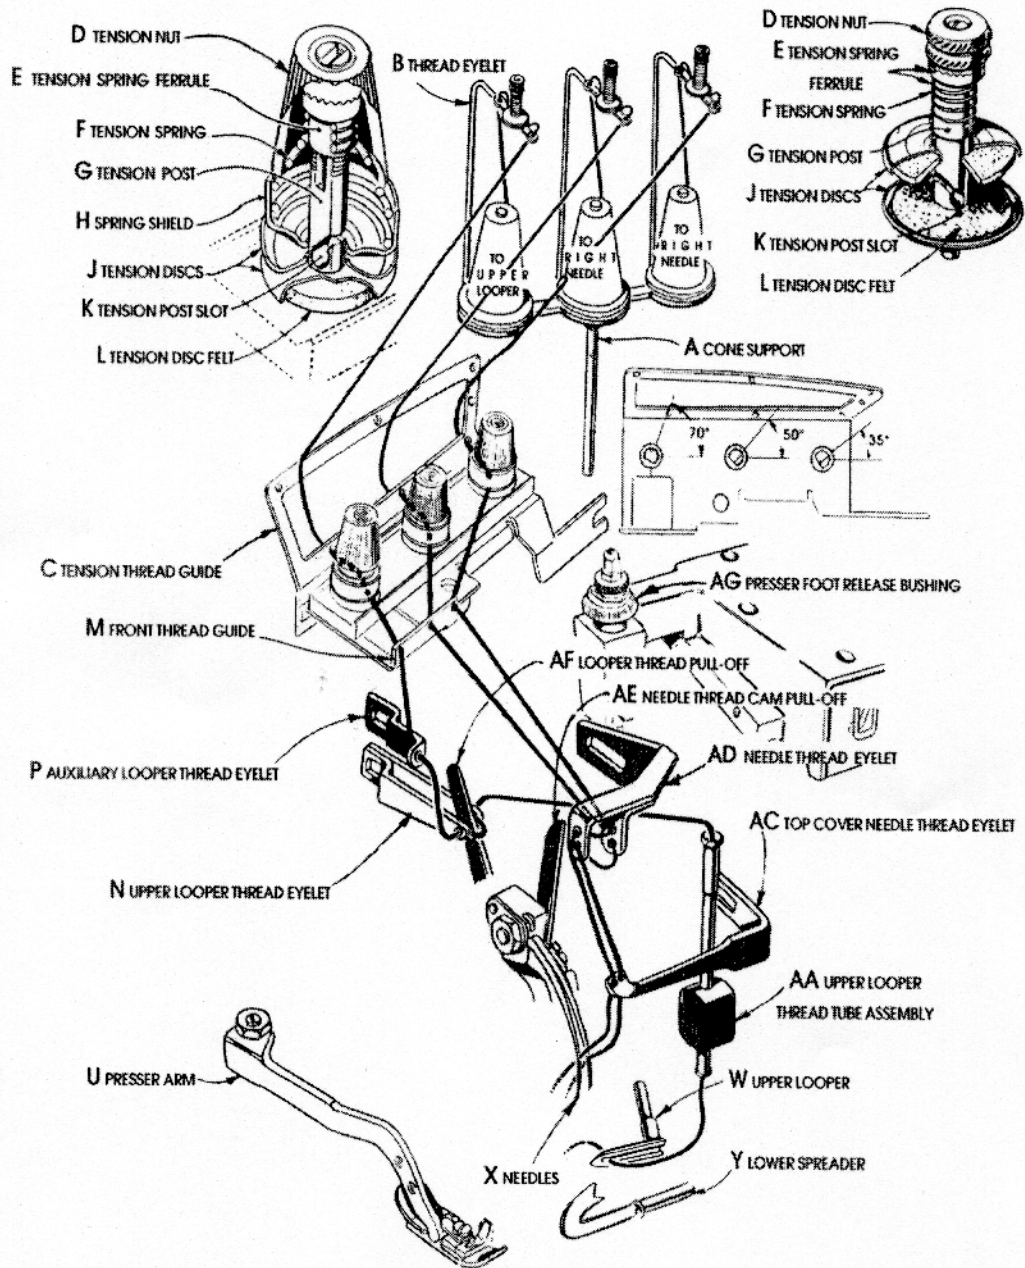


HUGO 2P



EXPLODED VIEWS ...



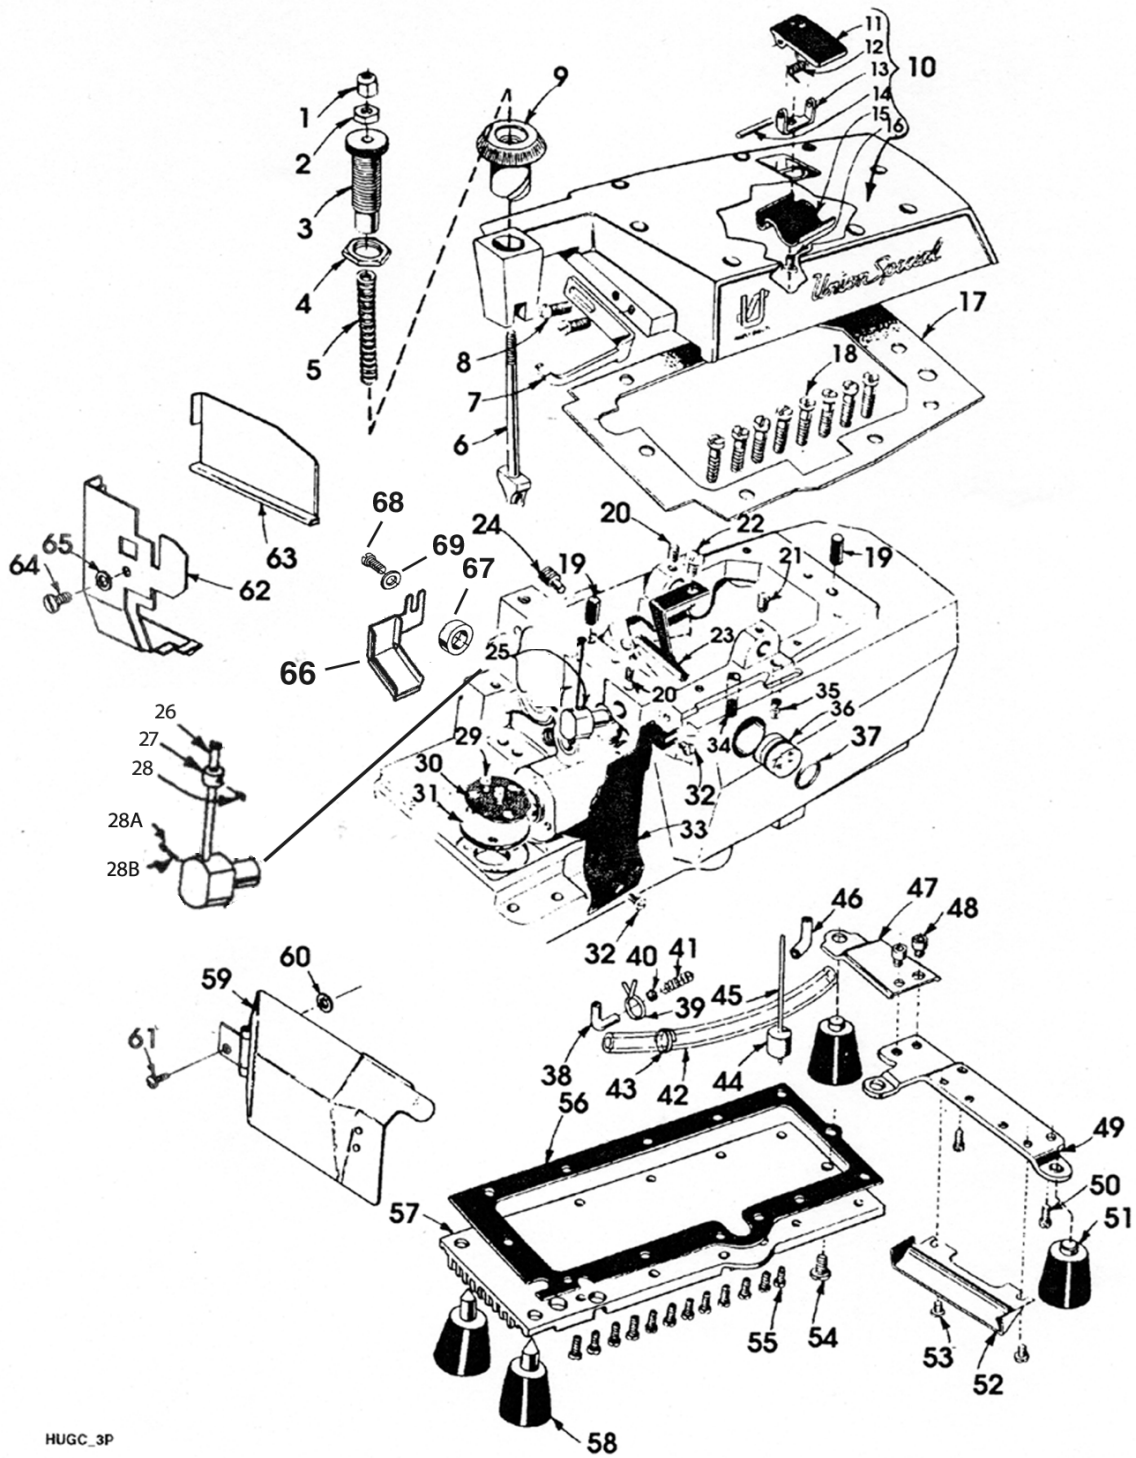

HUGC_3P




**MAIN FRAME, PRESSER FOOT RELEASE PARTS,
MISCELLANEOUS COVERS PLATES**

Ref. No.	Part No.	Description	Amt. Req.
1.	39557B	Presser Spring Plunger Cap Nut	1
2.	39557E	Presser Spring Plunger Locking Nut	1
3.	39557C	Presser Spring Plunger Adjusting Screw	1
4.	39557F	Lock Nut, for adjusting screw	1
5.	39557	Presser Spring	1
6.	39557A	Presser Spring Plunger	1
7.	39563X	Top Cover Needle Thread Eyelet	1
8.	22569B	Screw, for top cover needle thread eyelet	2
9.	39556A	Presser Foot Release Bushing	1
10.	39582AD	Top Cover,	1
11.	39582AF	Oil Filler Cover	1
12.	39582V	Spring	1
13.	39582AG	Hinge Bracket	1
14.	51-103BLK	Hinge Pin	1
15.	39582W	Oil Guard	1
16.	22562A	Screw, for hinge bracket	1
17.	39582XJ	Top Cover Gasket	1
18.	22541	Screw, for top cover	8
19.	667D-8	Dowel Pin	2
20.	22565	Set Screw, for upper looper thread tube assembly and looper drive lever shaft	1
21.	22565S	Spot Screw, for upper looper drive lever shaft	1
22.	22569D	Screw, for oil collector plate	1
23.	39594R	Oil Collector Plate	1
24.	22571E	Magnet Oil Drain Plug Screw	1
25.	29477MX	Upper Looper Thread Tube Assembly	1
26.	39568AN	Thread Tube	1
27.	39568AP	Collar	1
28.	1096	Screw	1
28A.	22743	Set Screw, for thread tube tension spring	1
28B.	36958J	Spring	1
29.	22760H	Screw, for oil filter screen and strainer	2
30.	39594G	Oil Filter Screen	1
-	39501K	Cloth plate stud for 39500RBAC, RBA	1
-	22657D10	Cloth plate screw for 39500RBAC, RBA	1

31. thru 65. See following page.



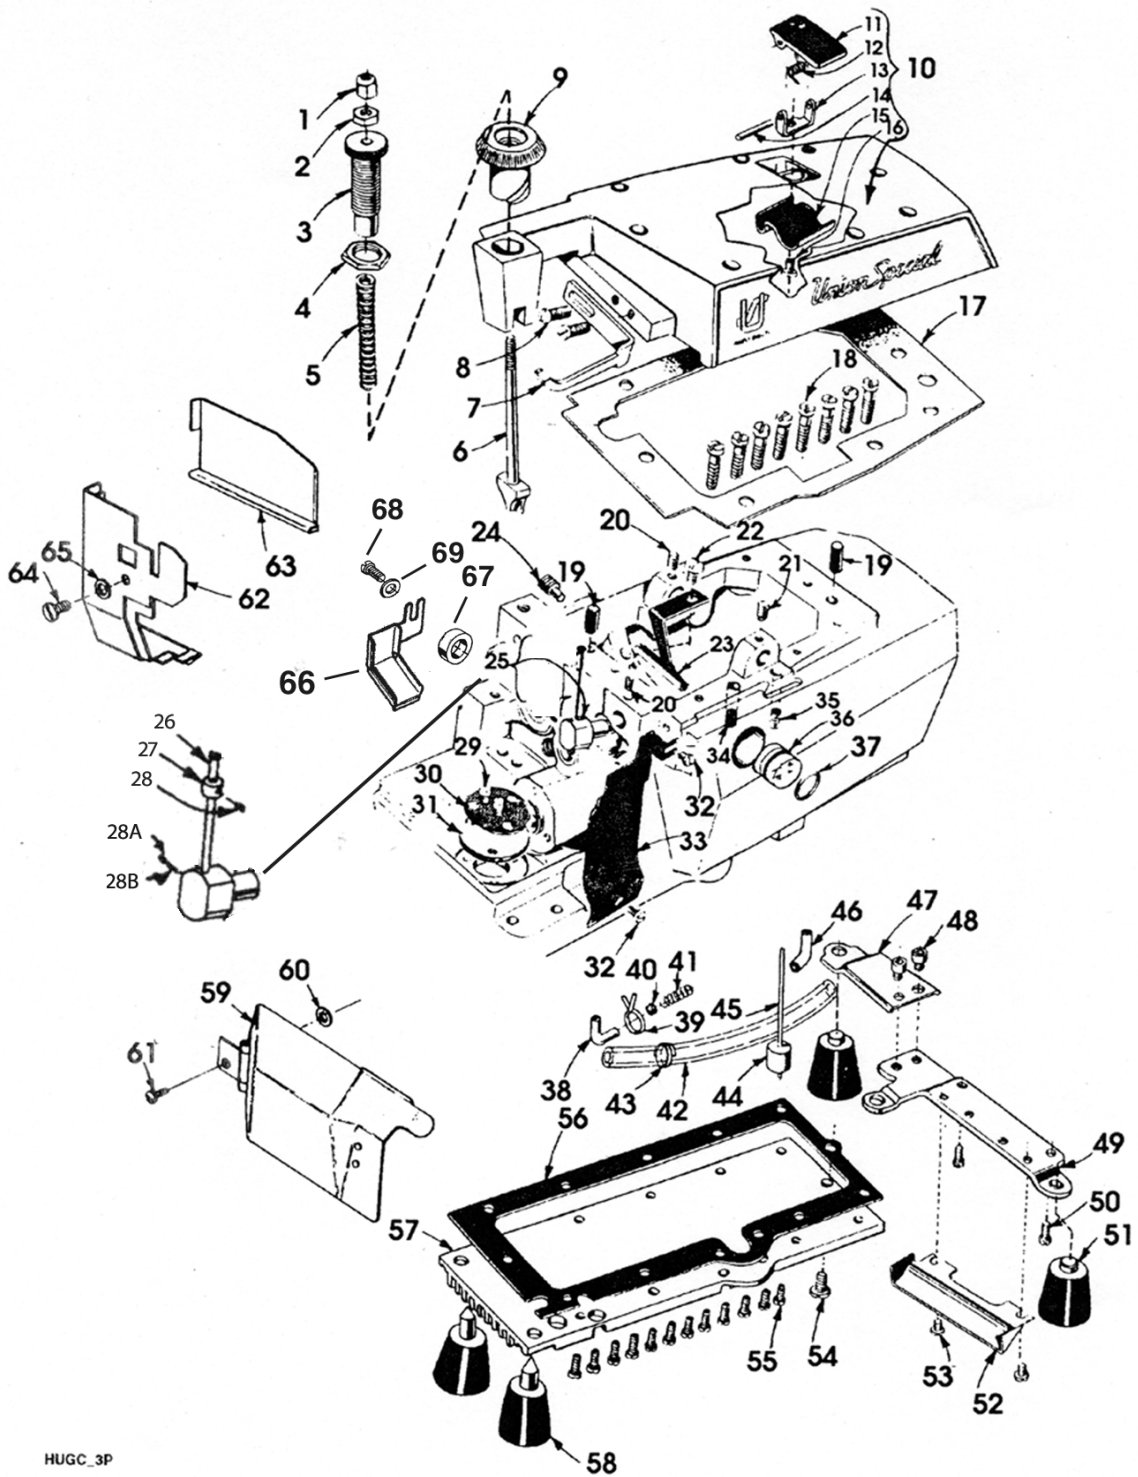


HUGC_3P



**MAIN FRAME, PRESSER FOOT RELEASE PARTS,
MISCELLANEOUS COVERS AND PLATES (CONT.)**

Ref. No.	Part No.	Description	Amt. Req.
1. thru 30. See preceding page.			
31.	39594H	Oil Strainer, felt	1
32.	22569D	Screw, for chip guard	2
33.	G39578U	Chip Guard, for Style 39500HUGC, UG,	1
-	G39578WA	Chip Guard, for Style 39500RBAC, RBA.....	1
34.	22569K	Screw, for oil sight gauge	1
35.	22894AE	Screw, for lower looper bar drive lever shaft	2
36.	39593H	Oil Sight Gauge	1
37.	660-243	Oil Gauge Seal Ring	1
38.	643-480BLK	Oil Tube	1
39.	660-885	Hose Clamp	1
40.	56393G	Oil Filter	1
41.	56393V	Oil Tube Spring	1
42.	666-280	Oil Tube	1
43.	RI-37	Wire Ring	1
44.	39593M	Oil Float Assembly.....	1
45.	39593D	Oil Indicator	1
-	39593C	Float	1
46.	39593J	Elbow Fitting	1
47.	39582F	Bottom Cover Extension	1
48.	22653D-4	Screw, for bottom cover extension	2
49.	39582BM	Base Plate	1
50.	22541B	Screw, for base plate	2
51.	39595	Isolator	2
52.	39582BL	Air Duct, outer	1
53.	22569D	Screw, for lower and outer air duct	2
54.	22586T	Screw, for bottom cover	1
55.	22541B	Screw, for bottom cover	12
56.	39582XK	Bottom Cover Gasket	1
57.	39582DH	Bottom Cover, for Style 39500HUGC, UG,	1
-	39582BW	Bottom Cover, for Style 39500RBAC, RBA.....	1
58.	51295B	Isolator	2
59.	39582DN	Feed Bar Cover Assembly, for Style 39500HUGC, UG,	1
60.	39198D	Washer	1
61.	22758C	Screw	1
62.	39582HF	Feed Bar Cover, top, for Style 39500RBAC, RBA.....	1
63.	39582GL	Feed Bar Cover, side, for Style 39500RBAC, RBA.....	1
64.	22804	Screw, for feed bar cover	1
65.	95956	Washer, for feed bar cover	1
66.	39534RB	Feed bar oil shield	1
67.	39580BB	Spacer	1
68.	22541B	Screw	1
69.	8372A	Washer	1



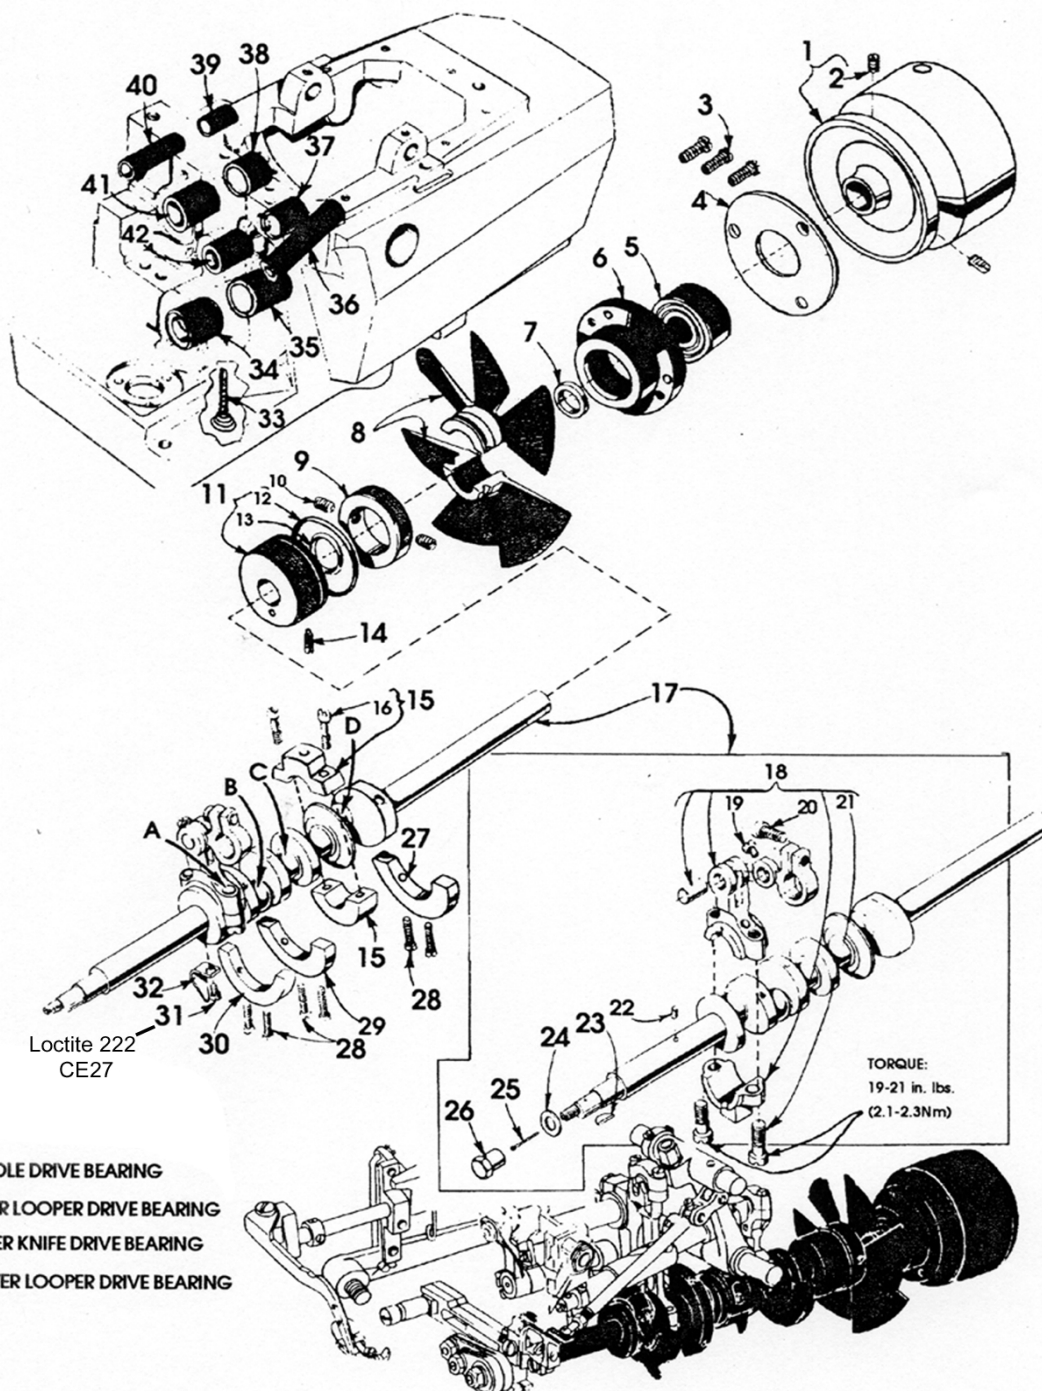


HUGC_4P



CRANKSHAFT MECHANISM AND BUSHINGS

Ref. No.	Part No.	Description	Amt. Req.
1.	39521J	Pulley	1
2.	22650CD-4	Screw, for pulley	2
3.	22569Y	Screw, for crankshaft ball bearing retaining plate	3
4.	39590H	Crankshaft Ball Bearing Retaining Plate	1
5.	660-835	Crankshaft Ball Bearing	1
6.	39590G	Crankshaft Ball Bearing Housing	1
7.	39590J	Thrust Washer	1
8.	39591L	Crank Chamber Cooling Fan	1
9.	39591H	Crank Chamber Cooling Fan Collar	1
10.	22894D	Spot Screw, for crank chamber cooling fan collar	2
11.	39590Y	Crankshaft Bearing inner, right	1
12.	660-443	"O" Ring, for crankshaft bearing, inner, right	1
13.	660-764	Oil Seal	1
14.	22565F	Screw, for crankshaft bearing, inner, right	1
15.	39590AC	Crankshaft Split Bearing	1
16.	97A	Screw, for crankshaft split bearing	2
17.	29477JM	Crankshaft and Needle Drive Arm Crank Assembly	1
18.	29477MC	Needle Drive Arm Crank and Connecting Rod Assembly	1
19.	22768C	Screw, for needle drive arm connecting rod pin	1
20.	22596H	Screw, for needle drive arm crank	1
21.	22729AB	Screw, for needle drive arm connecting rod	2
22.	51-228BLK	Vent Plug	1
23.	39541A	Feed Drive Eccentric Key	1
24.	40-46	Washer	1
25.	See page 32	Metering Pin.....	1
26.	39536FN	Nut, for crankshaft	1
27.	39591B	Crankshaft Counterweight, right	1
28.	22747B	Screw, for crankshaft counterweights	6
29.	39591A	Crankshaft Counterweight, middle	1
30.	39591K	Crankshaft Counterweight, left	1
31.	22513C	Screw, for oil splasher	1
32.	39594N	Oil Splasher	1
33.	666-94	Oil Wick and Spring	1
34.	39590AB	Crankshaft Bushing, left	1
35.	39590T	Crankshaft Bushing, inner, left	1
36.	39544Z	Lower Looper Bar Bushing	1
37.	39552P	Needle Drive Arm Crank Bushing, right	1
38.	39573AA	Upper Knife Drive Arm Bushing, right	1
39.	39555R	Foot Lifter Shaft Bushing, right	1
40.	39555P	Foot Lifter Shaft Bushing, left	1
41.	39573K	Upper Knife Drive Arm Crank Bushing, left	1
42.	39552U	Needle Drive Arm Crank Bushing, left, for 39500RBAC, RBA.....	1
-	39552AL	Needle Drive Arm Crank Bushing left, for 39500HUGC, UG	1



 


UPPER AND LOWER LOOPER DRIVING PARTS

Ref. No.	Part No.	Description	Amt. Req.
1.	39508AH	Upper Looper.....	1
2.	39543	Upper Looper Holder	1
3.	22564G	Screw, for upper looper holder	1
4.	39543A	Upper Looper Holder Collar	1
5.	77	Screw, for upper looper holder collar	1
6.	22565F	Spot Screw, for bushing and cam guide	1
7.	1025L	Lock Screw, for bushing and cam guide screw	1
*8.	39543T	Cam Follower	1
*9.	39543S	Bushing and Cam Guide	1
*10.	39543K	Upper Looper Drive Shaft	1
11.	22503F	Screw, for cam follower locking clamp	1
12.	39543E	Cam Follower Locking Clamp	1
13.	97	Screw, for ball joint guide fork	2
14.	39544J	Ball Joint Guide Fork, for upper looper drive lever	1
15.	482C	Upper Looper Shaft Collar	1
16.	22894C	Set Screw, for upper looper shaft collar	2
17.	22565	Set Screw, for upper looper rocker shaft	1
18.	39543X	Upper Looper Drive Lever Shaft	1
19.	22565S	Spot Screw, for upper looper drive lever shaft	1
20.	39543W	Upper Looper Drive Lever	1
21.	39543AT	Clamp Collar, for upper looper drive shaft	1
22.	22875M	Screw, for clamp collar	1
23.	39543P	Upper Looper Drive Shaft Thrust Washer	2
24.	39543AV	Upper Looper Drive Lever Connecting Rod	1
25.	39543AF	Nut, barrel	4
26.	22513C	Screw, for oil splasher	1
27.	39594N	Oil Splasher	1
28.	77	Screw, for lower looper bar connecting link pin	1
29.	39544B	Lower Looper Bar Connecting Link	1
30.	39544D	Lower Looper Bar Connecting Link Pin	2
31.	77	Screw, for lower looper bar connecting link pin	1
32.	22894AE	Set Screw, for lower looper driving shaft	2
33.	482C	Lower Looper Drive Shaft Collar	1
34.	22894C	Set Screw, for lower looper drive shaft collar	2
35.	660-206	"O" Ring, for lower looper driving shaft	1
36.	39544V	Lower Looper Drive Shaft	1
37.	39508P	Lower Looper, for Style 39500HUGC, UG,	1
37A.	39560B	Lower Spreader, for Style 39500RBAC, RBA.....	1
38.	39151	Nut, for lower looper bar	1
39.	39544	Lower Looper Bar	1
40.	39594N	Oil Splasher	1
41.	22513C	Screw, for oil splasher	1
42.	29126DF	Lower Looper Bar Drive Lever and Connecting Rod Assembly	1
43.	39544AA	Lower Looper Drive Lever Connecting Rod	1
44.	22729E	Screw, for connecting rod	2
45.	22729D	Screw, for connecting rod	2
46.	39544S	Ball Joint Guide Fork	1
47.	97	Screw, for ball joint guide fork	2
48.	39544U	Lower Looper Bar Drive Lever	1

* The use of assembly No. 29126EC is recommended instead of the individual parts.




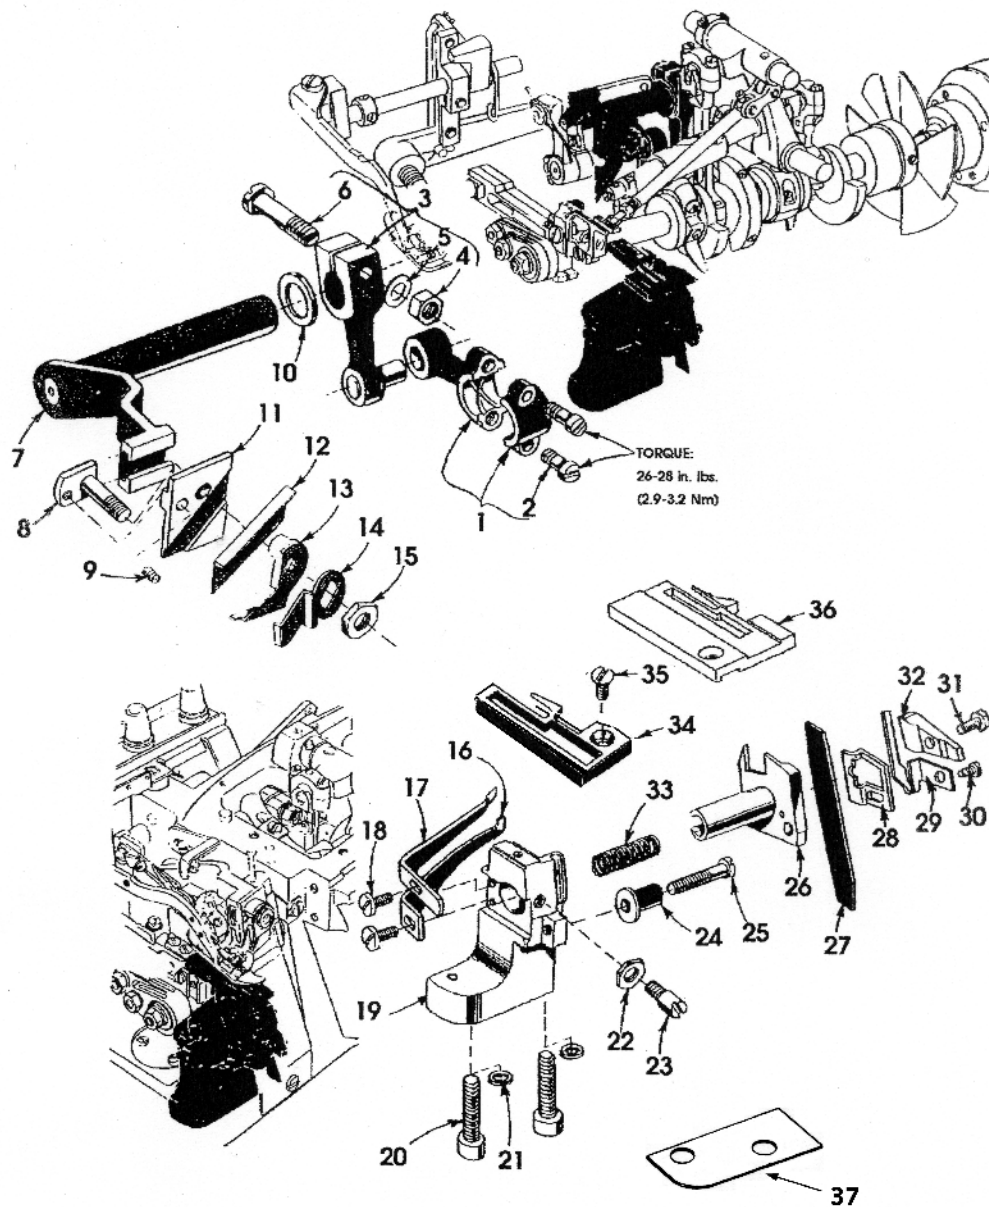

UPPER AND LOWER KNIFE

Ref. No.	Part No.	Description	Amt. Req.
1.	39573AE	Upper Knife Drive Connection Rod	1
2.	22587J	Screw, for upper knife drive connection rod	2
3.	39573E	Upper Knife Drive lever	1
4.	55235E	Nut, for upper knife drive lever	1
5.	6042A	Washer, for upper knife drive lever	1
6.	55235D	Locking Stud, for upper knife drive lever	1
7.	39573H	Upper Knife Drive Arm	1
8.	39571D	Upper Knife Clamp Stud	1
9.	22738	Screw, for upper knife clamp stud	1
10.	39573A	Upper Knife Drive Arm Washer	1
11.	39572	Upper Knife Holder Block	1
12.	39570	Upper Knife	1
13.	39571F	Upper Knife Clamp	1
14.	39571B	Upper Knife Chain Guard	1
15.	14077	Nut, for upper knife clamp stud	1
16.	39525D	Needle Guard, front, for Style 39500HUGC, UG,	1
-	39525H	Needle Guard, front, for Style 39500RBAC, RBA.....	1
17.	39525E	Needle Guard, rear, for Style 39500HUGC, UG,	1
-	39525J	Needle Guard, rear, for Style 39500RBAC, RBA.....	1
18.	22585A	Screw, for needle guards, 39500RBAC, RBA.....	2
-	90	Screw, for needle guards, 39500HUGC, UG.....	2
19.	39580AJ	Throat Plate Support for Style 39500HUGC, UG,	1
-	39580A	Throat Plate Support, for Style 39500RBAC, RBA.....	1
20.	22653B12	Screw, for throat plate and lower knife support bracket	2
21.	39580F	Washer, for throat plate and lower knife support bracket	2
22.	14077	Nut, for lower knife holder locking screw	1
23.	22892B	Locking Screw, for lower knife holder	1
24.	39550C	Lower Knife Holder Locating Stud	1
25.	22729B	Screw, for lower knife holder locking stud	1
26.	39550AK	Lower Knife Holder, for Style 39500HUGC, UG,	1
-	39550AF	Lower Knife Holder, for Style 39500RBAC, RBA.....	1
27.	39549	Lower Knife	1
28.	39550AC	Knife Guide Plate	1
29.	39550AE	Lower Knife Clamp Spring	1
30.	605A	Screw, for lower knife clamp spring	1
31.	22588J	Screw, for lower knife clamp	1
32.	39550AD	Lower Knife Clamp	1
33.	39550X	Lower Knife Holder Spring	1
34.	C39524BA1/8	Throat Plate, marked "EM", for Style 39500HUGC, UG.....	1
35.	22524	Screw, for throat plate	1
36.	39524BV	Throat Plate, for Style 39500RBAC, RBA.....	1
37.	39880H	Shim for 39500HUGC, UG.....	1



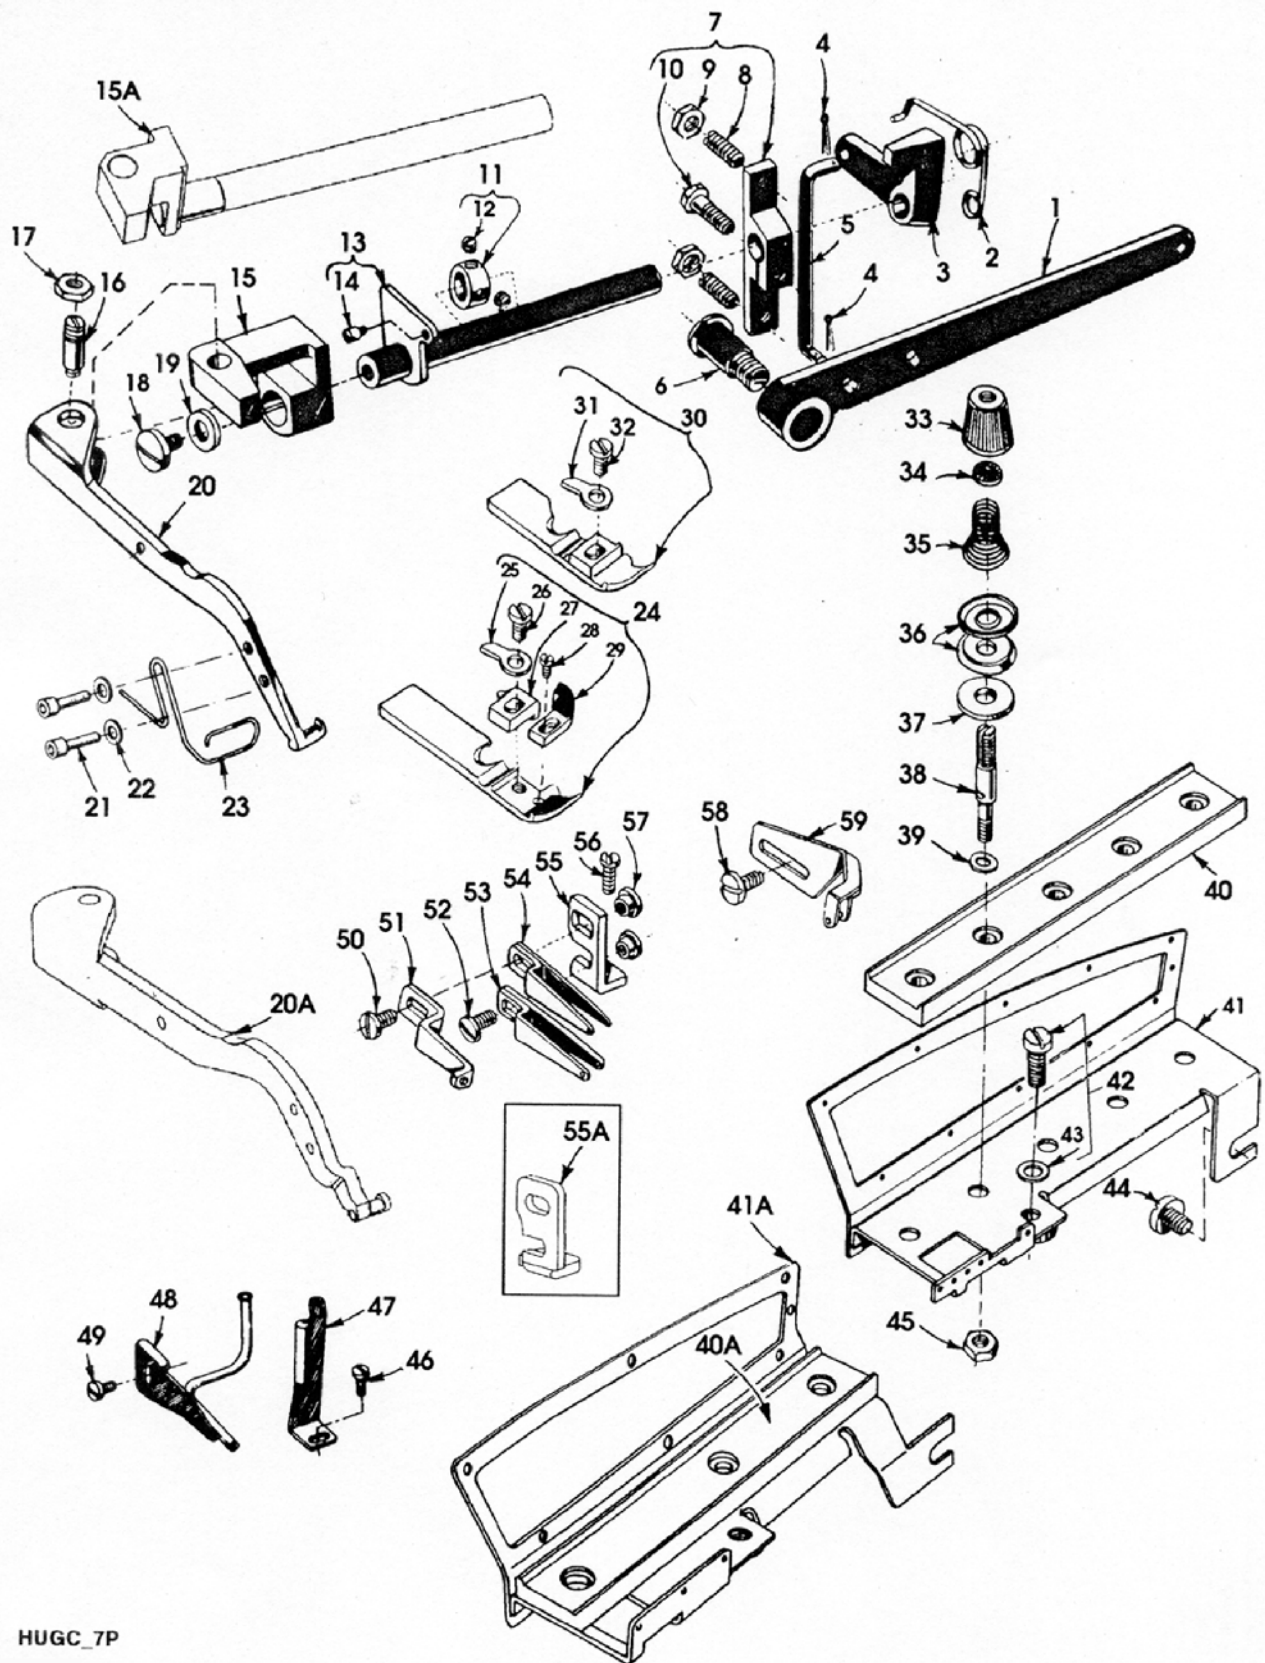


HUGC_7P

**FOOT LIFTER, THREAD TENSION
PARTS AND MISCELLANEOUS EYELETS**

Ref. No.	Part No.	Description	Amt. Req.
1.	39855	Foot Lifter Lever	1
2.	39555B	Foot Lifter Lever Spring	1
3.	39555D	Foot Lifter Intermediate Lever	1
4.	660-142	Cotter Pin, for foot lifter lever connecting link	2
5.	39555F	Foot Lifter Lever Connecting Link	1
6.	22566B	Screw, for foot lifter lever	1
7.	39555C	Foot Lifter Lever Arm	1
8.	22597E	Set Screw, for foot lifter lever arm	2
9.	12538	Lock Nut, for foot lifter lever arm	2
10.	627	Screw, for foot lifter lever arm	1
11.	12865	Foot Lifter Lever Shaft Thrust Collar	1
12.	88	Screw, for foot lifter lever shaft collar	2
13.	39555AE	Presser Arm Support Bracket Shaft, 39500HUGC, UG,	1
14.	22845B	Screw	1
15.	39555AF	Presser Arm Support Bracket, for Style 39500HUGC, UG,	1
15A.	39555AX	Presser Arm Support Bracket, for Style 39500RBAC, RBA.....	1
16.	22791H	Screw Pin, for presser arm	1
17.	258A	Nut, for presser arm screw	1
18.	88D	Screw	1
19.	61434G	Washer	1
20.	39556S	Presser Arm, for Style 39500HUGC, UG,	1
20A.	39556J	Presser Arm, for Style 39500RBAC, RBA.....	1
21.	99360	Screw, for 39500HUGC, UG.....	2
-	99359	Screw, for 39500RBAC, RB.....	2
22.	95956	Washer	2
23.	99682L	Finger Guard	1
24.	39520BA	Presser Foot, for Style 39500HUGC, UG,	1
25.	39530G	Hinge Spring	1
26.	22768B	Screw, for stitch tongue and hinge spring	1
27.	39597AB	Stitch Tongue, marked "EK"	1
28.	22738	Screw, for chip guard	1
29.	39530P	Chip Guard	1
30.	39520BW	Presser Foot, for Style 39500RBAC, RBA	1
31.	39530G	Hinge Spring	1
32.	28	Screw, for hinge spring	1

33. thru 59. See following page.




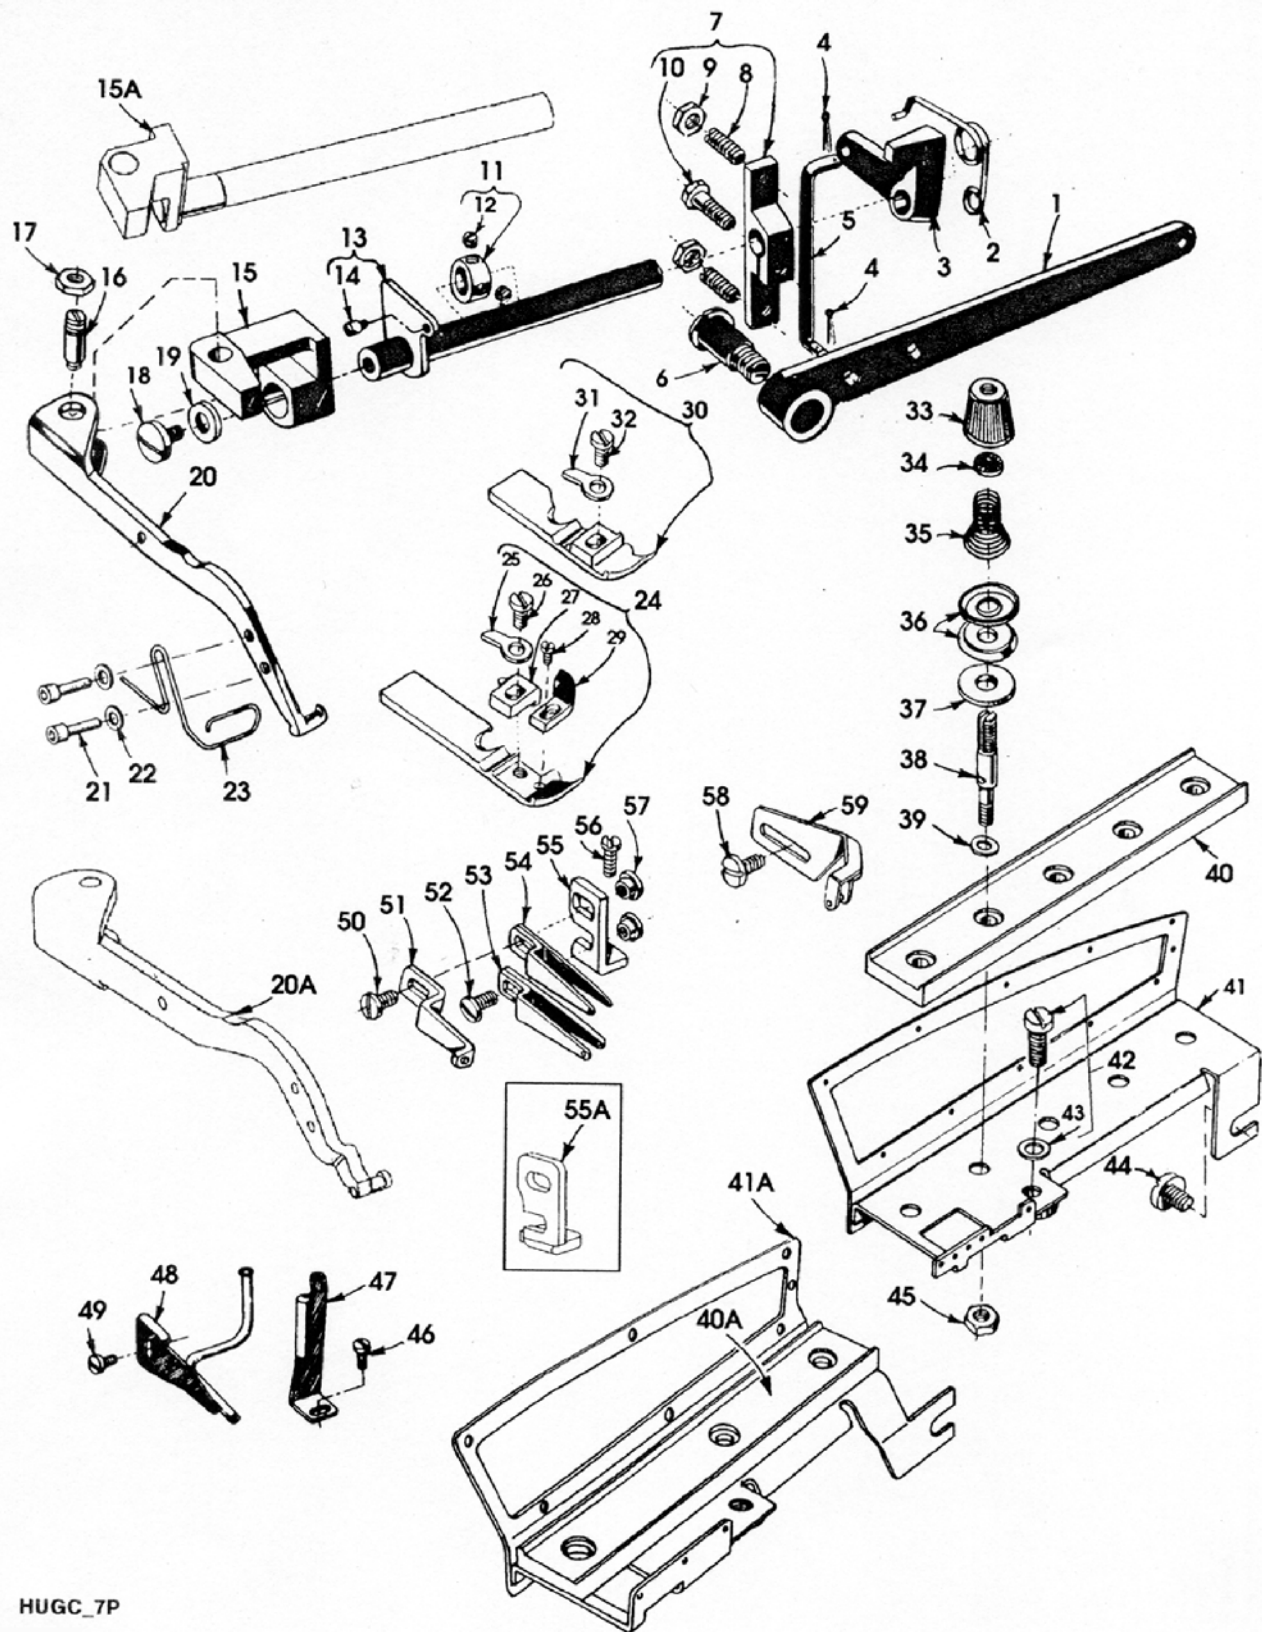


HUGC_7P

**FOOT LIFTER, THREAD TENSION
PARTS AND MISCELLANEOUS EYELETS (CONT.)**

Ref. No.	Part No.	Description	Amt. Req.
1. thru 32. See preceding page.			
33.	39592Z	Needle Tension Nut	4
34.	39592AK	Tension Spring Ferrule	1
35.	39592AR4	Needle Thread Tension Spring, right, for Style 39500HUGC, UG,	1
-	39592AR5	Needle Thread Tension Spring, left, for Style 39500HUGC, UG.....	1
-	39592AR2	Needle Thread Tension Springs, for Style 39500RBAC, RBA.....	2
-	39592AR1	Looper Thread Tension Spring , 39500HUGC, UG, RBA, RBAC.....	1 or 2
36.	39592AD	Thread Tension Disc	6 or 8
37.	39592AF	Tension Disc Felt	3 or 4
38.	39592AL	Tension Post	3 or 4
39.	8372A	Washer	3 or 4
40.	39592AN	Tension Post Bar, for Style 39500HUGC, UG,	1
40A.	39592AM	Tension Post Bar, for Style 39500RBAC, RBA.....	1
41.	39592AG5	Tension Post Mounting Bracket, for Style 39500HUGC, UG,	1
41A.	39592AG3	Tension Post Mounting Bracket, for Style 39500RBAC, RBA.....	1
42.	22806A	Screw, for tension mounting bracket	1
43.	40-46	Washer	1
44.	22847B	Screw, for tension post mounting bracket	1
45.	39592AH	Nut, for tension post	3 or 4
46.	22541B	Screw, for Style 39500HUGC, UG,	1
47.	39582EW	Feed Bar Cover Latch, for Style 39500HUGC, UG,	1
48.	39568AK	Thread Tube Bracket Assembly, for Style 39500HUGC, UG,	1
49.	88A	Screw, for Style 39500HUGC, UG,	1
50.	93A	Screw, for upper looper thread eyelet	1
51.	39568E	Auxiliary Lower Thread Eyelet	1
52.	93A	Screw, for lower looper thread eyelet	1
53.	39568B	Upper Looper Thread Eyelet, for Style 39500RBAC, RBA.....	1
54.	39568L	Upper & Lower Looper Thread Eyelet, for Style 39500HUGC, UG,	2
55.	39568AD	Looper Thread Eyelet Bracket, for Style 39500HUGC, UG,	1
55A.	39568D	Thread Eyelet Mounting Bracket, for Style 39500RBAC, RBA.....	1
56.	22569B	Screw, for looper thread eyelet mounting bracket	1
57.	43139A	Nut, for looper thread eyelet screw	2
58.	22569D	Screw.....	1
59.	39563N	Needle Thread Eyelet	1



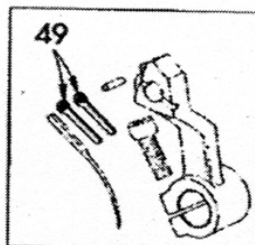
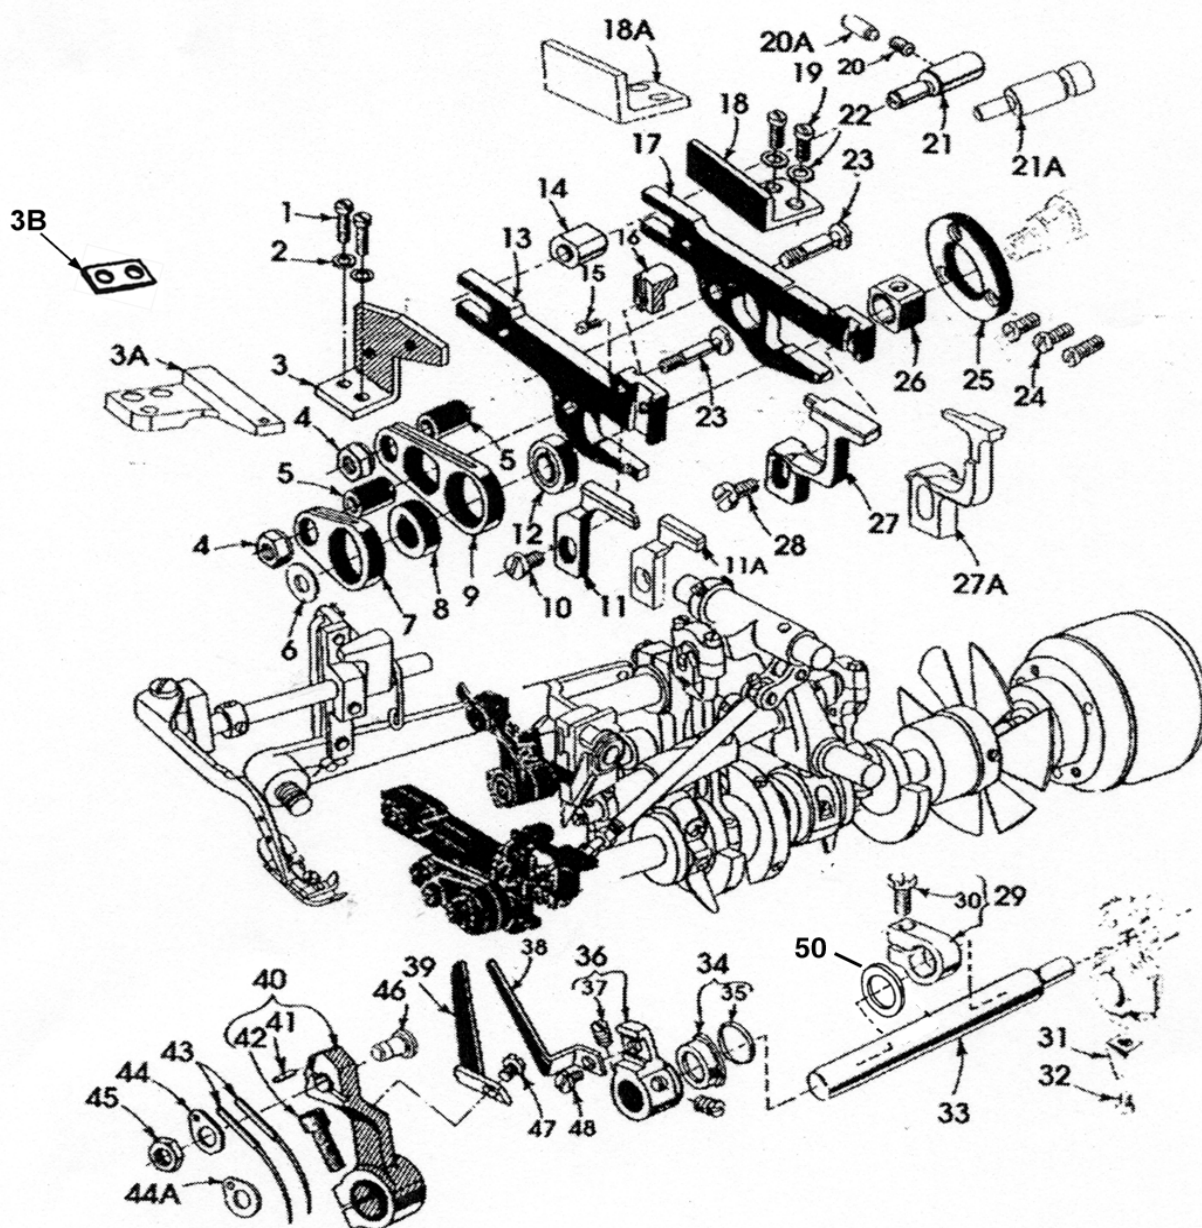


NEEDLE DRIVE AND FEED MECHANISM

Ref. No.	Part No.	Description	Amt. Req.
1.	22541B	Screw, for main feed bar guide, left	2
2.	8372A	Washer, for main feed bar guide, for Style 39500HUGC, UG.....	2
3.	39535T	Main Feed Bar Guide, left, for Style 39500HUGC, UG,	1
3A.	39535W	Main Feed Bar Guide, left, for Style 39500RBAC, RBA.....	1
3B.	39835G	Washer plate, for Style 39500RBAC, RBA	1
4.	39536E	Nut, for feed bar driving stud	2
5.	39536C	Feed Bar Driving Stud Bushing	2
6.	40-46	Washer, for crankshaft	1
7.	39536AF	Main Feed Bar Drive Connection	1
8.	39540B12	Main Feed Drive Eccentric, for Style 39500HUGC, UG.....	1
-	39540B16	Main feed Drive Eccentric, for Style 39500RBAC, RBA	1
9.	39536AE	Differential Feed Bar Drive Connection	1
10.	93A	Screw, for main feed dog	1
11.	39505AB	Main Feed Dog, for Style 39500HUGC, UG,	1
11A.	39505BV	Main Feed Dog, for Style 39500RBAC, RBA.....	1
12.	39540B14	Differential Feed Driving Eccentric, for Styles 39500HUGC, UG.....	1
-	39540B18	Differential feed Driving Eccentric, for Style 39500RBAC, RBA.....	1
13.	39534	Main Feed Bar.....	1
14.	39535J	Feed Bar Guide Block	1
15.	22797A	Screw, for knife drive block, for Style 39500HUGC, RBAC.....	1
16.	J39573DAR	Knife Drive Block, for Style 39500RBAC.....	1
	39573DA	Knife Drive Block for 39500UG & HUGC	1
17.	39534G	Differential Feed Bar	1
18.	39535U	Differential Feed Bar Guide, right, for Style 39500HUGC, UG,	1
18A.	39535D	Differential Feed Bar Guide, right, for Style 39500RBAC, RBA.....	1
19.	22569B	Screw, for differential feed bar guide, right, for Style 39500RBAC, RBA..	2
20.	22894R	Screw, for feed adjusting pin, for Style 39500HUGC, UG,	1
20A.	22565F	Screw, for feed adjusting pin, for Style 39500RBAC, RBA.....	1
21.	39535AB	Feed Adjusting Pin, marked "C", for Style 39500HUGC, UG,	1
21A.	39535C	Feed Adjusting Pin, marked "C", for Style 39500RBAC, RBA.....	1
22.	8372A	Washer, for differential feed bar guide screw	2
23.	39536B	Feed Bar Driving Stud	2
24.	22569G	Screw, for thrust washer	3
25.	39534AF	Differential Feed Bar Thrust Washer	1
26.	39538	Feed Lift Block	1
27.	39526AB	Differential Feed Dog, for Style 39500HUGC, UG,	1
27A.	39526BU	Differential Feed Dog, for Style 39500RBAC, RBA.....	1
28.	22528	Screw, for differential feed dog	1
29.	39543Y	Needle Drive Shaft Thrust Collar	1
30.	22782A	Screw, for needle drive shaft thrust collar	1

31. thru 49. See following page.




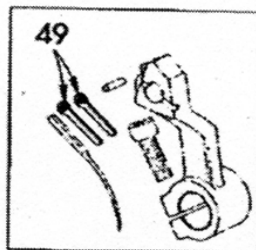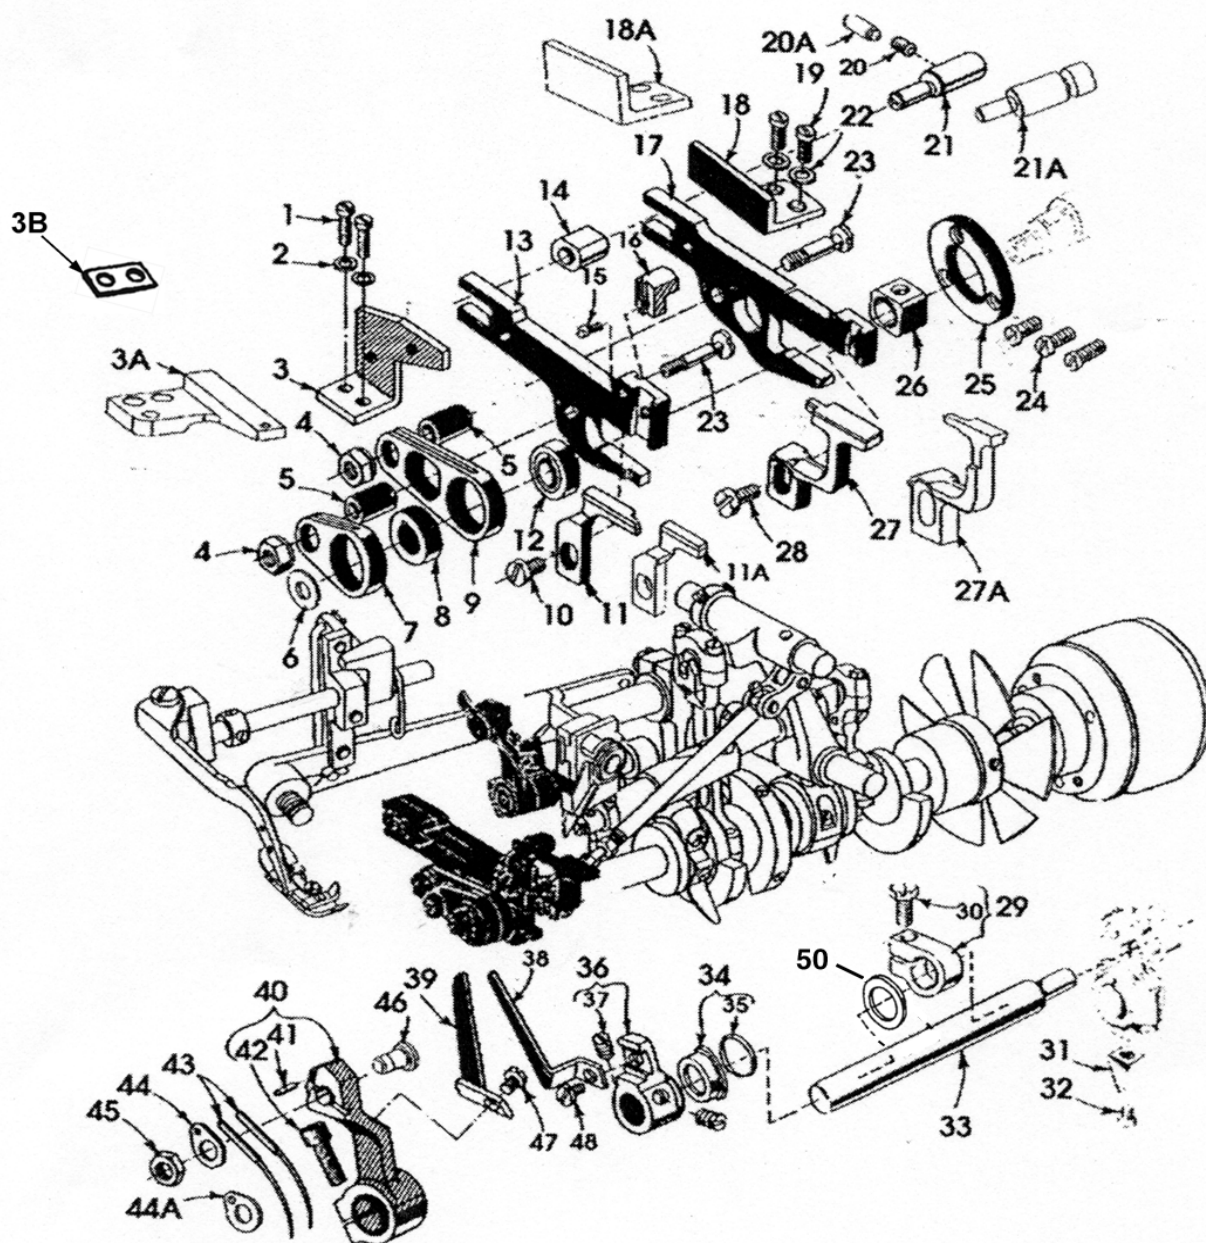

NEEDLE DRIVE AND FEED MECHANISM (CONT.)

Ref.			Amt.
No.	Part No.	Description	Req.
1. thru 30. See preceding page.			
31.	39594N	Oil Splasher	1
32.	22513D	Screw, for oiler splasher	1
33.	39552R	Needle Drive Shaft , for 39500RBAC, RBA.....	1
-	39552AN	Needle Drive Shaft, for 39500HUGC, UG	1
34.	39552AG	Oil Seal, for needle drive shaft	1
35.	660-207	Oil Seal Ring	1
36.	39568AL	Take Up Lever, for Style 39500HUGC, UG,	1
-	39568AC	Takeup Lever, for Style 39500RBAC, RBA.....	1
37.	88B	Screw , for looper thread pull-off lever	2
38.	39568AM	Looper Thread Pull-off,	1
39	39563P	Needle Thread Cam Pull-off, for Style 39500RBAC, RBA.....	1
-.	39563AD	Needle Thread Cam Pull-off, for Style 39500HUGC, UG,	1
40.	39552AW	Needle Drive Arm, marked "X", for Style 39500HUGC,UG,	1
-	39552AA	Needle Drive Arm, for Style 39500RBAC, RBA.....	1
41.	39552AD	Stop Pin, for needle	1
42.	22596H	Screw, for needle drive arm	1
43.	154GFS	Needle, for 39500HUGC, UG, RBAC, RBA.....	2
44.	39551H	Needle Clamp Washer.....	1
45.	14077A	Nut, for needle clamp stud	1
46.	39551J	Needle Clamp Stud	1
47.	87U	Screw, for needle thread cam pull-off	1
48.	22513	Screw, for looper thread pull-off	1
49.	39551P	Needle Spacer, for Style 39500HUGC , UG.....	2
50.	C50043H029	Washer	1



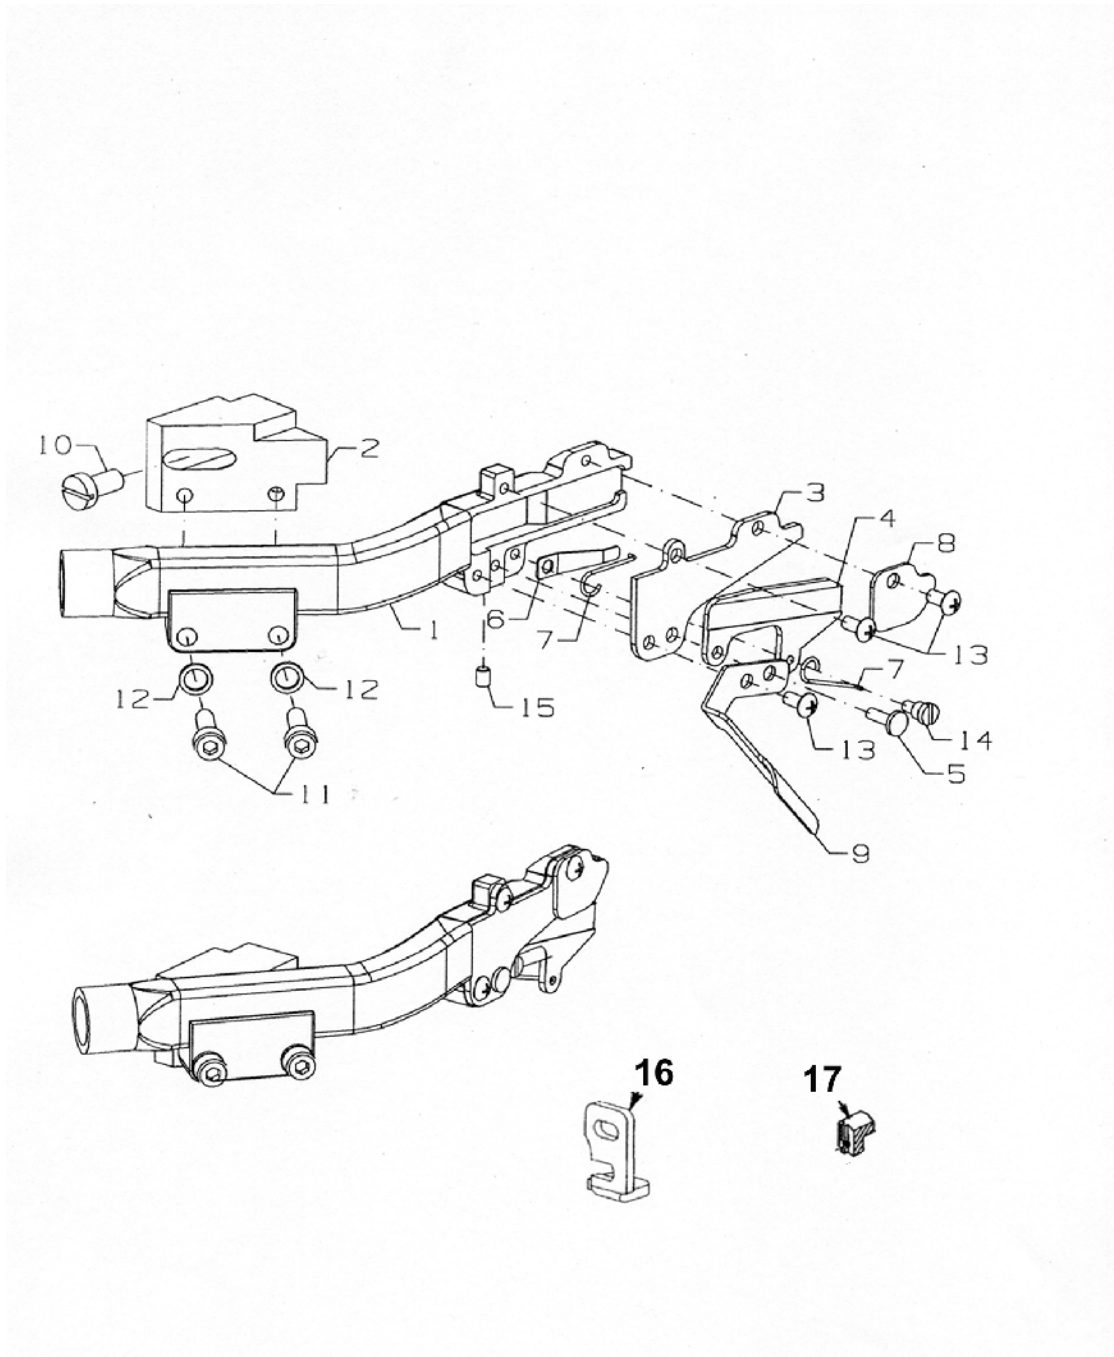


**CHAIN CUTTER SPARE PARTS LIST, FOR STYLES 39500HUGC,RBAC
29480JAT1 CHAIN CUTTER ASSEMBLY, FOR STYLE 39500HUGC
29480JAT2 CHAIN CUTTER ASSEMBLY, FOR STYLE 39500RBAC**

Ref. No.	Part No.	Description	Amt. Req.
1.	A25001-1	Pipe, for Style 39500HUGC	1
-	A25001-2	Pipe, for Style 39500RBAC	1
2.	A25002-1	Block, for Style 39500HUGC	1
-	A25002-2	Block, for Style 39500RBAC	1
3.	A25003	Upper Knife	1
4.	A25004	Lower Knife	1
5.	A25005	Support Pin, for lower knife	1
6.	A25006	Spring Plate, for lower knife	1
7.	A25007	Spring, for lower knife	1
8.	A25008	Guide Plate, for upper knife	1
9.	A25009	Finger Guard, for Style 39500HUGC	1
10.	22569B	Screw, for block	1
11.	A21028	Screw, for pipe (M4 x 15)	2
12.	A21093	Spring Washer, for (M4)	2
13.	A21092A	Screw, for upper knife (M3 x 6)	3
14.	A21092B	Screw, for spring (M3 x 4)	1
15.	A19958	Set Screw	1
*16.	39568D	Thread Eyelet Mounting Bracket	1
*17.	J39573DAR	Knife Drive Block	1

* PARTS NOT INCLUDED WITH CHAIN CUTTER ASSEMBLY



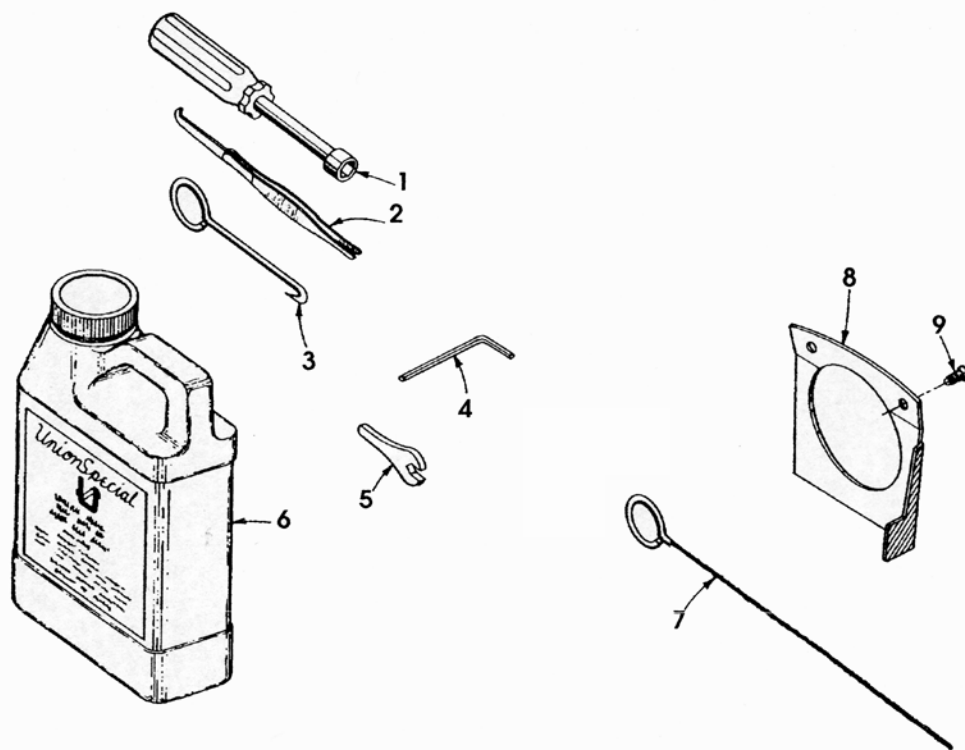


ACCESSORIES

Ref. No.	Part No.	Description	Amt. Req.
1.	21388AU	Socket Wrench, size 3/8"	1
2.	12288403	Tweezers	1
3.	21227BF	Feed Eccentric Hook	1
4.	WR65	Allen Wrench, size 1/16"	1
5.	116	Wrench, size 9/32"	1
6.	28604R	Machine Oil, 16 fl. oz.	1
7.	GR-51899	Looper Threader	1
8.	21375BB	Belt Guard	1
9.	80	Belt Guard Screws	2



OIL METERING PIN

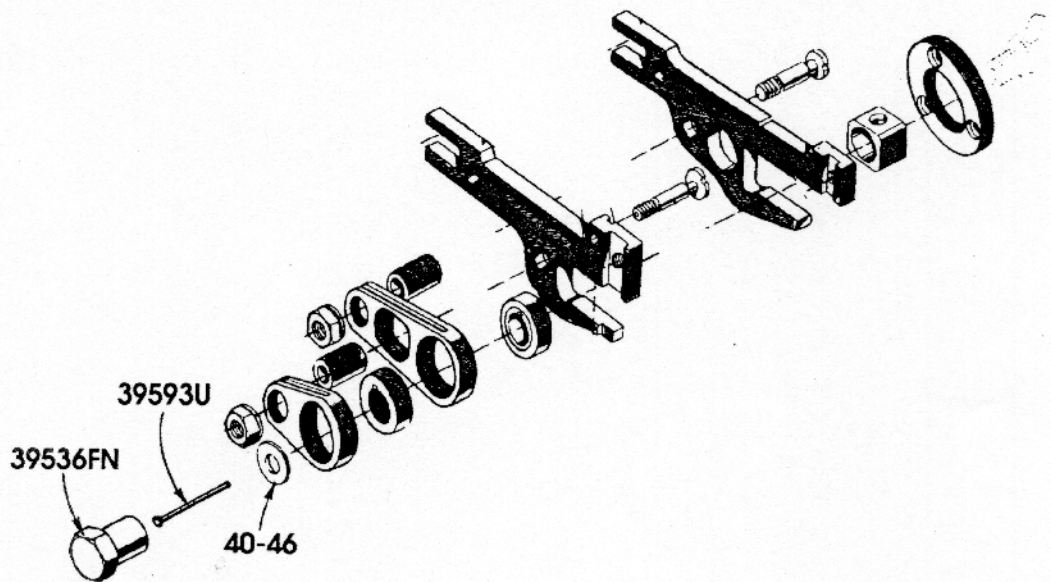

HUGC_10P

Beginning with machine serial number 1620485 the wood oil metering plug is now being replaced by a steel metering pin which is inserted inside the main shaft on all 39500 Class Machines.

The pin is easy to remove. On the "Mark IV" machines the head is protruding beyond the end of the shaft and it can be pulled out with tweezers. With a wood plug the rate of oil flow was determined by the grain of the wood itself and could not be varied or adjusted. The steel pin, on the other hand, can be easily replaced with a slightly larger or smaller diameter pin to reduce or increase the flow to a precise degree.

NOTE: One final point - metering pins can not be added to machines with serial numbers below 1620485, because the crankshafts are not prepared for them. A new crankshaft assembly would have to be installed with the pre-selected metering pin in it.

39593U METERING PIN SIZE CHART		
PART NUMBER	PIN DIAMETER	
	INCH	MM
39593 U-125	0.1250	3.175
39593 U-126	0.1260	3.200
39593 U-1265	0.1265	3.213
39593 U-127	0.1270	3.225
39593 U-1275	0.1275	3.238
39593 U-128	0.1280	3.251
39593 U-1285	0.1285	3.263
39593 U-129	0.1290	3.276

NOTES

[illegible]

NUMERICAL INDEX OF PARTS

Part No. Page No.

1025L17
 11631
 1228840331
 1253821
 1286521
 1407719
 14077A27
 154GFS27
 21227DR31
 21375BB31
 21388AU31
 22503F17
 2251327
 22513C... 15, 17
 22513D27
 2252419
 2252825
 2254111
 22541B13, 23, 25
 22562A11
 22564G17
 2256511, 17
 22565F15, 17, 25
 22565S11, 17
 22566B21
 22569B11, 23
 22569B25, 29
 22569D11, 13, 23
 22569G25
 22569K13
 22569Y15
 22571E11
 22585A19
 22586T13
 22587J19
 22588J19
 22596H15, 27
 22597E21
 22650CD-415
 22653B1219
 22653D-413
 22657D10.....11
 22729AB15
 22729B19
 22729D17
 22729E17
 2273819, 21
 2274311
 22747B15
 22758C13
 22760H11
 22768B21
 22768C15
 22782A25

Part No. Page No.

22791H21
 22797A25
 2280413
 22806A23
 22845B21
 22847B23
 22875M17
 22892B19
 22894AE ..13, 17
 22894C17
 22894D15
 22894R25
 258A21
 2821
 28604R31
 29126EC.....17
 29126DF17
 29477JM15
 29477MC15
 29477MX11
 29480JAT1.....29
 29480JAT2.....29
 3915117
 39198D13
 39501K11
 39505AB25
 39505BV25
 39508AH17
 39508P17
 39520BA21
 39520BW 21
 39521J15
 39524BV19
 39525D19
 39525E19
 39525H19
 39525J19
 39526AB25
 39526BU25
 39530G21
 39530P.....21
 3953425
 39534AF25
 39534G25
 39534RB13
 39535AB25
 39535C25
 39535D25
 39535J25
 39535T25
 39535U25
 39535W25
 39536AE25
 39536AF25

Part No. Page No.

39536B25
 39536C25
 39536E25
 39536FN15
 3953825
 39540B1225
 39540B1425
 39540B16.....25
 39540B18.....25
 39541A15
 3954317
 39543A17
 39543AF17
 39543AT17
 39543AV17
 39543E17
 39543K17
 39543P17
 39543S17
 39543T17
 39543W17
 39543X17
 39543Y25
 3954417
 39544AA17
 39544B17
 39544D17
 39544J17
 39544S17
 39544U17
 39544V17
 39544Z15
 3954919
 39550AC19
 39550AD19
 39550AE19
 39550AF19
 39550AK19
 39550C19
 39550X19
 39551H27
 39551J27
 39551P27
 39552AD27
 39552AA27
 39552AG27
 39552AL.....15
 39552AN.....27
 39552AW27
 39552P15
 39552R.....27
 39552U15
 39555AE21
 39555AF21

Part No. Page No.

39555AX23
 39555B21
 39555C21
 39555D21
 39555F21
 39555P15
 39555R15
 39556A11
 39556J21
 39556S21
 3955711
 39557A11
 39557B11
 39557C11
 39557E11
 39557F11
 39560B17
 39563AD27
 39563N23
 39563P27
 39563X11
 39568AC.....27
 39568AD23
 39568AK23
 39568AL27
 39568AM27
 39568AN.....11
 39568AP.....11
 39568B23
 39568D21, 23
 39568E23
 39568J11
 39568L23
 3957019
 39571B19
 39571D19
 39571F19
 3957219
 39573A19
 39573AA15
 39573AE19
 39573DA.....25
 39573E19
 39573H19
 39573K15
 39580A19
 39580AJ19
 39580BB13
 39580F19
 39582AD11
 39582AF11
 39582AG11
 39582BL13
 39582BM13
 39582BW13
 39582DH13
 39582DK11
 39582DN13
 39582EW23



NUMERICAL INDEX OF PARTS

Part No. Page No.

39582F 13
 39582GL 13
 39582V 11
 39582HF 13
 39582W 11
 39582XJ 11
 39582XK 13
 39590AB 15
 39590AC 15
 39590G 15
 39590H 15
 39590J 15
 39590T 15
 39590Y 15
 39591A 15
 39591B 15
 39591H 15
 39591K 15
 39591L 15
 39592AD 23
 39592AF 23
 39592AG3 23
 39592AG5 23
 39592AH 23
 39592AK 23
 39592AL 23
 39592AM 23
 39592AN 23
 39592AR1 23
 39592AR2..... 23
 39592AR4 23
 39592AR5 23
 39592Z 23
 39593C 13
 39593D 13
 39593H 13
 39593J 13
 39593M..... 13
 39593U-125 .. 32
 39593U-126 ..15,32
 39593U-1265 ..32
 39593U-127 .. 32
 39593U-1275 ..32
 39593U-128 .. 32
 39593U-1285 ..32
 39593U-129 .. 32
 39594G 11
 39594H 13
 39594N ...15,17, 27
 39594R 11
 39595... 13
 39597AB. 21
 39835G..... 25
 39855 21
 39880H 19
 40-46 ...15, 23, 25
 43139A..... 23
 482C 17
 51-103BLK 11

Part No. Page No.

51-228BLK15
 51295B.....13
 55235D.....19
 55235E19
 56393G13
 56393V13
 6042A.....19
 605A.....19
 61434G.....21
 627.....21
 643-480BLK.....13
 660-142.....21
 660-20617
 660-20727
 660-24313
 660-44315
 660-76415
 660-83515
 660-88513
 666-28013
 666-9415
 667D-811
 77.....17
 80.....31
 8372A .13,23, 25
 87U27
 88 21
 88 A... 23
 88 B..... 27
 88 D..... 21
 90..... 19
 93A 23, 25
 9595613, 21
 97..... 17
 97A15
 99359.....21
 9936021
 99682L21
 A1995829
 A2102829
 A21092A29
 A21092B29
 A2109329
 A25001-129
 A25001-229
 A25002-129
 A25002-229
 A2500329
 A2500429
 A2500529
 A2500629
 A2500729
 A2500829
 A2500929
 C39524BA1/8...19
 C50043H029...27
 G39578U13
 G39578WA13
 GR51899.....31
 J39573DAR.....25
 RI- 37 13
 WR65.....31



NOTES

[illegible]

NOTES

[illegible]

NOTES

[illegible]

Corporate Office:

Union Special LLC
One Union Special Plaza
Huntley, IL 60142
Phone: 847•669•4500
Fax: 847•669•4239

European Distribution Center:

Union Special GmbH
Raiffeisenstrasse 3
D-71696 Möglingen, Germany
Tel: 49•07141•247•0
Fax: 49•7141•247•100



Union Special®
INDUSTRIAL SEWING EQUIPMENT